

INSTRUCTION SHEET

BRIGHTLOGIC - PROGRAMMING OPTIONS


There are many easy ways to program a BrightLogic unit:

- Wireless USB
- RS232
- Manually
- Pre-set settings straight from the factory



Remove power before working in unit.

Appropriate safety equipment should be worn for all maintenance.

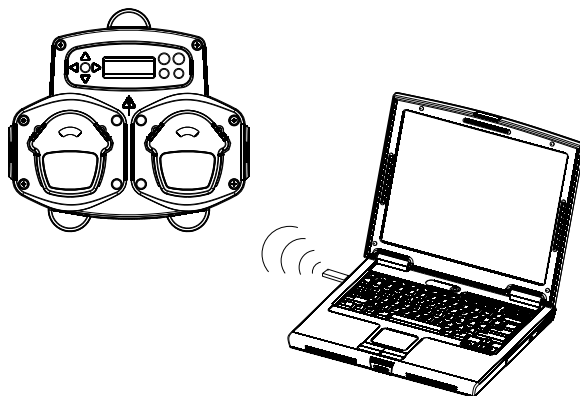


Wireless USB connection

Requires the use of the wireless USB dongle (WLCOM-WUSB)

Ensure that the BrightLogic unit is switched **ON** before attempting to make any connections. If the communication distance is quite short, changing channel will probably help.


Note: For further assistance refer to the full instruction manual (B988).

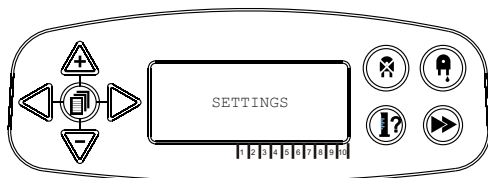

Manually

Using the keypad on the unit itself by following the settings menu to program the unit to your desired requirements.

Note: For further assistance refer to the full instruction manual (B980).

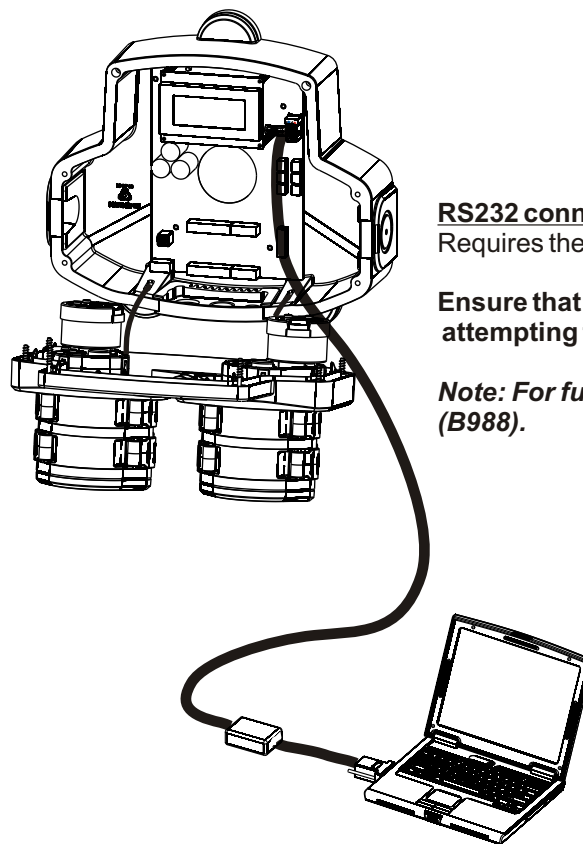

RS232 connection

Requires the use of a RS232 COMM's lead (WLCOM-RS232)

Ensure that the BrightLogic unit is switched **OFF** before attempting to make any connections.

Note: For further assistance refer to the full instruction manual (B988).

Pre-set settings

It's possible for Brightwell to issue units already programmed with your desired setting and formula.

Using the free BrightLogic Windows Program it's also simple to adapt your program using the 'dry weight' function'. the program will automatically adjust all of the pump run times/dosages to suit the new machine size.

Note: For further assistance refer to the Computer Software Instructions (B988).

