American Dish Service Ads upright double rack dishwasher MODEL: 5AG ES



PARTS MANUAL

900 Blake Street Edwardsville, Kansas 66111 (913)422-3700



American Dish Service

The **American Dish Service** part numbers contained in this publication are replacement parts for equipment listed with governmental and regulatory agencies and are specified to maintain the regulatory mark and certification. These parts must only be replaced by those who are trained in the operation and service of commercial dishmachines. Aftermarket parts or modified parts are not compliant or listed with the standards of governmental and regulatory agencies; aftermarket parts are not authorized by ADS for replacement repairs. ADS will not be responsible for any liability If parts are used in the repair of the machine that are not ADS-specified, by those installing non-certified replacement parts or attempts to change the machine's cycle or operation other than as designed and certified. **Read the warnings and cautions provided below before working on or replacing parts on any ADS equipment.**



DANGER

The installation of electrical parts contained in this publication require the following precautions:

The electrical power supplied to this machine is an imminent hazard to life that could result in severe bodily injury or death if not properly installed or connected correctly. When working in the control box or on electrical parts, always disconnect power and perform the appropriate lock-out/tag-out proceedure before servicing. Replace the cover to the control box and other protective covers when finished with servicing this equipment before returning the machine to normal operation.

LOOSE ELECTRICAL CONNECTIONS: Damage to the equipment can occur if the following precautions are not observed. Before connecting power to the machine, check all electrical terminals in the control box. Screws can loosen in transit. Loose connections on high amp load terminals such as the pump motor and tank heaters will cause wire burning and component damage during operation and will not be covered under ADS warranty.

"CLEAN CIRCUIT" means the electrical circuit breaker for the dishmachine supplies no other outlets, machines, or lights. GFCI outlets are not recommended for commercial dishmachines; ADS recommends that a single-rack machine be installed with the wire connection (hard-wired) directly from the circuit breaker. All high temp and conveyor equipment must be hard wired. If a plug and socket are used to provide electrical power to a dishmachine in a commercial kitchen, then according to electrical code it must be a GFCI, but not all GFCIs are the same. They must be rated for the Amp draw for the designed circuit.

For Reference: The NEC Article 210.8 regarding GFCI Protection (B) Other Than Dwelling Units (2) Commercial and Institutional Kitchens. All 15 and 20A, 125V receptacles installed in kitchens, even those that do not supply the countertop surface, must be GFCI protected.



WARNING

The chemical feeders and controls contained in this publication require the following precautions:

READ Manufacturer's Manual before Using this Product. For your safety read and observe all warnings in these instructions. While performing installation of parts described in this booklet, wear approved Personal Protective Equipment, including chemically resistant gloves and Safety Eye-Wear.

CHEMICALS: There are potentially hazardous situations when working with industrial cleaning chemicals for dishmachines. See chemical manufacturer's safe practices and SDS or MSDS sheets for handling and installing chemicals and supply containers.

Chemicals can damage or corrode plumbing and stainless parts of the dishmachine. Do not run chemical lines over controls or plumbing. Always secure chemical lines and check regularly for leaks. If not properly handled, chemicals can cause serious bodily injury. In the event of chemical contact to skin or eyes; wash immediately with fresh water and seek medical attention.

DE-LIMING THE MACHINE: Because of potential hazards resulting from the combination of chlorine with acid solution, only authorized trained individuals must be allowed to de-lime a commercial dishmachine.

CONTAINERS: The ADS chemical delivery system is designed for 5 gallon pails of industrial low-energy chemical products. Always use chemical resistant safety gloves and safety goggles (indirect-vented or non-vented) when changing chemical buckets. Immediately report spills and refer to your chemical suppliers SDS safety data sheet or MSDS material safety data sheet for information if chemical comes in contact with skin or eyes.

Any modifications to the chemical delivery system for smaller containers must include Closed Loop Chemical Containers (spill proof bottles) in a secured racking system. It is the responsibility of the user of the machine to purchase chemicals in spill proof containers. <u>FAILURE CAN RESULT IN SERIOUS INJURY</u>. Never place chemicals in open containers or containers that can be easily tipped over when moving or changing product. Failure to do so will void your ADS warranty.

Chemical supplies must be kept in closed delivery containers to avoid spills or contamination. Do not place chemical solutions in open containers or containers that can be easily tipped over in moving or changing.

Do not open the doors while the machine is in operation. Doing so could result in serious bodily injury from spraying hot water and chemicals.



CAUTION

The door lever arm parts in this publication are installed under spring tension and caution is needed whenever parts are changed. Wear safety glasses when working on the doors and lever. Care should be taken when moving, installing, or replacing any door lever arm parts. Use the ADS lever arm tool to unload the door spring during replacement or adjustment. The spring tension suddenly released can result in pinch or blunt trauma, and puncture wounds. If a wound occurs from the release of spring tension, wash the wound area immediately because of the soils that can accumulate on the metal parts and seek medical attention.

NOTICE

BEFORE YOU BEGIN: American Dish Service provides this information as a service to our customers. **Keep all instructions for future reference**. ADS reserves the right to alter or update this information at any time. Should you desire to make sure that you have the most up-to-date information, we would direct you to the appropriate document on our web site: <u>www.americandish.com</u>. **It is your obligation as the customer to ensure that the replacement parts for the machine are installed safely and properly, and when completed, the machine is left in proper and safe working order.** Electrical, Plumbing, and Chemical hookup must be performed by a qualified professional who will ensure that the equipment is installed in accordance with all applicable Codes, Ordinances, and Safety requirements. Failure to follow the installation instructions will void the warranty. **ADS assumes no liability or control over the installation of the equipment or replacement parts**. **Product failure due to improper installation is not covered under the ADS Warranty**.

Plumbing parts:


When working on the water inlet manifold, first relieve the water line pressure by turning off the water supply to the machine then energize the machine's fill valve. By doing this the manifold will empty of water. Turn off the electrical power and lock out/tag out the machine. It will then be safe to open the plumbing inlet manifold.

TANKLESS WATER HEATERS have shown to be problematic for commercial dishmachines. It has been the experience of ADS that tankless supply systems require multiple units plumbed in sequence with a recirculation loop to achieve proper pressure and temperature.

Check with the tankless water heater manufacturer, they may recommend a storage tank to guarantee proper flow and line pressure to the machine. <u>Failure to provide adequate water quantity, pressure and temperature to the machine will cause</u> the machine to function improperly and is not the responsibility of ADS. Improperly installing ADS equipment or parts in this manner could void the warranty. All costs associated with providing an adequate water supply to the machine is the sole responsibility of the user.


Drain replacement parts should not be reduced in size, all drain lines should remain the same size as it exits the dishmachine or larger. If you have questions, call 800-922-2178 or visit our website at <u>www.AmericanDish.com</u>

061-2400 Cabinet Assembly 5AG ES

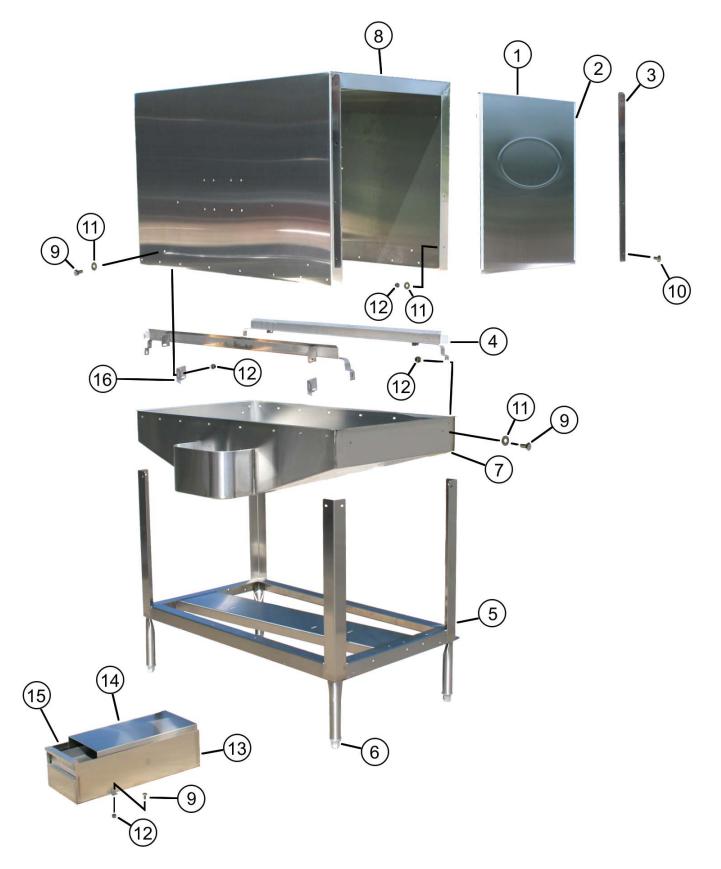

061-2400 Cabinet Assembly 5AG ES


Ref. No.	Part No.	No. Req.	Description
1	087-6151	2	DOOR W/DOOR STRIPS
2	083-6108	4	DOOR STRIP, CLEAR
3	087-6114	4	DOOR GUIDE, SS
4	085-6191	1	TRAY TRACK W/BRACKETS AND HARDWARE
5	085-6434	1	FRAME, 5AG ES
6	099-1003	4	BULLET FOOT, METAL, (1 1/4")
7	085-6432	1	PAN, 5AG ES
8	085-6433	1	HOOD, 5AG ES
9	098-1423	34	BOLT, 1/4-20 X 1/2" HH SS
10	098-1414	16	SCREW, 1/4-20 X 1/2" TRUSS HEAD, SS
11	098-2416	58	WASHER, 1/4" FLAT SS
12	098-2507	62	NUT, LOCK, 1/4-20, SS, WITH NYLON INSERT
13	089-9071	1	SCRAP ACCUMULATOR
14	089-9068	1	LID, "COVER" SCRAP ACCUMULATOR
15	089-9078	1	TRAY, SCRAP ACCUMULATOR
16	086-6192	4	BRACKET, TRAY TRACK SUPPORT, 5AG
NS	292-1028	1	NO-HUB, 2" PIPE TO PIPE
NS	087-6851	1	PAN STIFFENER, 5AG ES
NS	051-9003	REP.	COMPLETE SCRAP TRAP ASSEMBLY

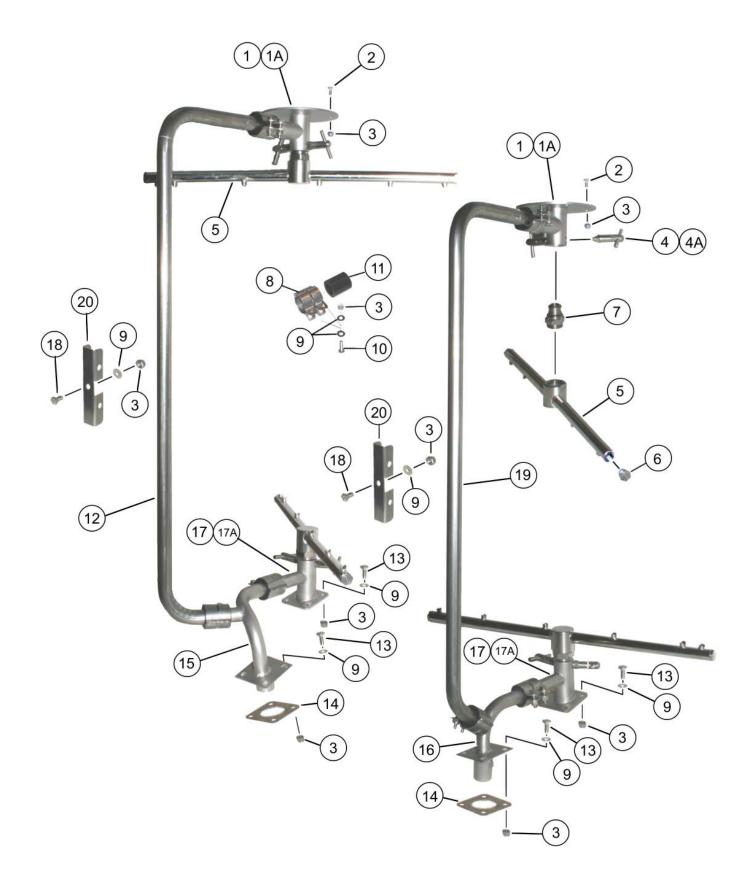

062-2100 Spray System Assembly 5AG ES

Part No.	No. Req.	Description
085-6626	1	BASE SPRAY, UPPER, SS, BAYONET STYLE
085-6628	OPT.	BASE SPRAY, UPPER, SS, THUMBSCREW STYLE
098-1423	8	BOLT, 1/4-20 X 1/2" HH SS
098-2507	38	NUT, LOCK, 1/4-20 WITH NYLON INSERT
099-1028	8	BAYONET, SPRAY ARM PIN
098-1583	OPT.	SCREW, THUMB, 5/16-18 X 5/8" SS
081-6218	4	SPRAY ARM W/ END PLUGS, 5AG ES
084-6211	REP.	SPRAY ARM END PLUG, SS
081-6217	4	SPRAY ARM BEARING, WITH 'O' RING
085-6407	6	CLAMP, INSIDE MANIFOLD, SS, METAL CLAMP ONLY
098-2416	42	WASHER, 1/4" FLAT SS
098-1445	12	BOLT, 1/4-20 X 1" HH SS
093-1047	6	SLEEVE, MANIFOLD (INSIDE) TUBE
087-6252	1	MANIFOLD LH 5AG ES
098-1426	16	BOLT, 1/4-20 X 3/4" HH SS
389-6603	2	GASKET
085-6336	1	MANIFOLD, 'Y' PIPE (INSIDE) LH SIDE, 5AG ES
085-6337	1	MANIFOLD, 'Y' PIPE (INSIDE) RH SIDE, 5AG ES
085-6642	2	BASE, SPRAY, LOWER, SS, BAYONET STYLE
085-6641	OPT.	BASE, SPRAY, LOWER, SS, THUMBSCREW STYLE
098-1423	2	BOLT, 1/4-20 X 1/2" HH SS
087-6253	1	MANIFOLD RH 5AG ES
086-6682	2	MANIFOLD BRACKET 5AG ES
089-6310	N/A	O'RING, SPRAY ARM BEARING
	085-6626 085-6628 098-1423 098-2507 099-1028 098-1583 081-6218 084-6211 081-6217 085-6407 098-2416 098-1445 093-1047 087-6252 098-1426 389-6603 085-6336 085-6337 085-6642 085-6641 098-1423 087-6253 086-6682	Part No.Req.085-66261085-6628OPT.098-14238098-250738099-10288098-1583OPT.081-62184084-6211REP.081-62174085-64076098-144512093-10476087-62521098-142616389-66032085-63361085-66422085-6641OPT.098-14232085-6641OPT.098-14231085-66422085-6641OPT.098-14232087-62531086-66822


063-2600 Recirculating Pump Assembly RH 5AG ES

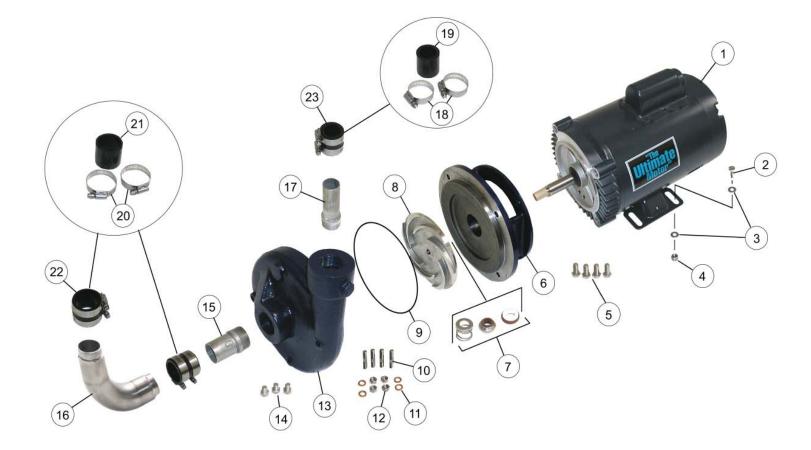

063-2600 Recirculating Pump Assembly RH 5AG ES


Ref. No.	Part No.	No. Req.	Description
1	091-1024	1	MOTOR, WASH PUMP 1 HP
2	098-1426	2	BOLT, ¼-20 X ¾" HH SS
3	098-2416	4	WASHER, 1/4" FLAT SS
4	098-2507	2	NUT, LOCK, ¼-20 WITH NYLON INSERT
5	098-1607	4	BOLT, 3/8-16 X 7/8" HH SS
6	082-6301	1	HOUSING, WATER PUMP "REAR"
7	092-2001	1	SEAL, WASH PUMP
8	082-6312	1	IMPELLER, SS OPEN, ES SERIES
9	089-6309	1	GASKET, O'RING, WATER PUMP
10	098-1512	4	STUD, 5/16-18 X 1 5/8" SS
11	098-2503	4	WASHER, 5/16 COPPER
12	098-2502	4	NUT, 5/16-18 HEX SS
13	082-6307	1	COVER, WATER PUMP W/STUDS
14	092-1145	3	PLUG, PIPE 1/8" SS
15	085-6333	1	SUCTION TUBE PIPE
16	085-6335	1	SUCTION TUBE ELBOW, 5AG-ES, RH
17	085-6338	1	PIPE, DISCHARGE WELDMENT, 5AG-ES
18	098-9024	2	CLAMP, HOSE – SCREW TYPE, DISCHARGE TUBE SLEEVE
19	093-1048	1	SLEEVE, DISCHARGE TUBE
20	098-9037	4	CLAMP, HOSE – SCREW TYPE, SUCTION TUBE SLEEVE
21	093-1049	2	SLEEVE, SUCTION TUBE
22	093-1039	REP	CLAMP – SLEEVE KIT, SUCTION TUBE
23	093-1040	REP	CLAMP – SLEEVE KIT, DISCHARGE TUBE
N/S	088-1091	REP	PUMP ASSEMBLY THROUGH IMPELLER
11/5	000-1091		(NEEDS O-RING 089-6309)

063-2800 Recirculating Pump Assembly LH 5AG ES

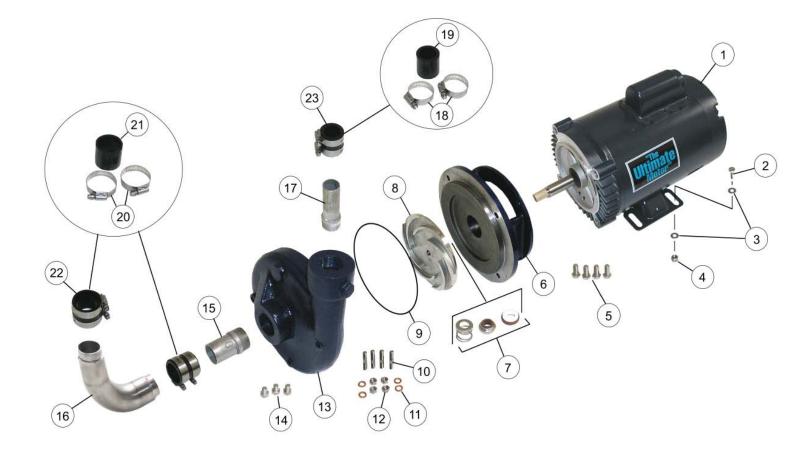


063-2800 Recirculating Pump Assembly LH 5AG ES

Ref. No.	Part No.	No. Req.	Description
1	091-1024	1	MOTOR, WASH PUMP 1 HP
2	098-1426	2	BOLT, ¼-20 X ¾" HH SS
3	098-2416	4	WASHER, ¼" FLAT SS
4	098-2507	2	NUT, LOCK, ¼-20 WITH NYLON INSERT
5	098-1607	4	BOLT, 3/8-16 X 7/8" HH SS
6	082-6301	1	HOUSING, WATER PUMP "REAR"
7	092-2001	1	SEAL, WASH PUMP
8	082-6312	1	IMPELLER, SS OPEN, ES SERIES
9	089-6309	1	GASKET, O'RING, WATER PUMP
10	098-1512	4	STUD, 5/16-18 X 1 5/8" SS
11	098-2503	4	WASHER, 5/16 COPPER
12	098-2502	4	NUT, 5/16-18 HEX SS
13	082-6307	1	COVER, WATER PUMP W/STUDS
14	092-1145	3	PLUG, PIPE 1/8" SS
15	085-6333	1	SUCTION TUBE PIPE
16	085-6334	1	SUCTION TUBE ELBOW, 5AG-ES, LH
17	085-6338	1	PIPE, DISCHARGE WELDMENT, 5AG-ES
18	098-9024	2	CLAMP, HOSE – SCREW TYPE, DISCHARGE TUBE SLEEVE
19	093-1048	1	SLEEVE, DISCHARGE TUBE
20	098-9037	4	CLAMP, HOSE – SCREW TYPE, SUCTION TUBE SLEEVE
21	093-1049	2	SLEEVE, SUCTION TUBE
22	093-1039	REP	CLAMP – SLEEVE KIT, SUCTION TUBE
23	093-1040	REP	CLAMP – SLEEVE KIT, DISCHARGE TUBE
N/S	088-1091	REP	PUMP ASSEMBLY THROUGH IMPELLER
			(NEEDS O-RING 089-6309)

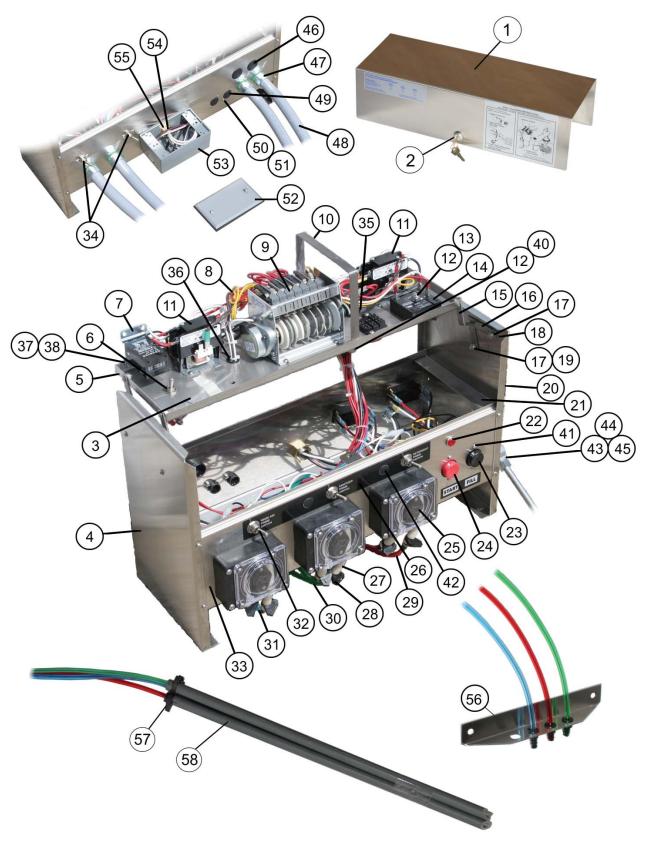

Ref.		No.	
No.	Part No.	Req.	Description
1	087-6433	1	COVER, CONTROL BOX
2	096-1002	1	LOCK, CONTROL BOX, WITH KEYS (KEY ONLY 096-1006)
3	099-1004	1	KEY, TIMER ADJUSTMENT
4	087-6431	1	CONTROL BOX END PANEL, LEFT SIDE
5	087-6432	1	CONTROL BOX SHELF
6	091-3060	1	SWITCH, DELIME
7	091-3049	1	COUNTER, ELECTRIC, 110 VOLT
8	091-5028	1	HARNESS, WIRING
9	091-3073	1	TIMER, (7 CAM), 90 SECOND
10	086-6317	1	HANDLE, CONTROL BOX SHELF
11	091-3083	2	CONTACTOR
12	098-2507	7	NUT, LOCK, ¼-20 WITH NYLON INSERT
13	098-1420	1	SCREW, ¼-20 X 1 ¼" TRUSS HEAD SS
14	091-3059	1	RELAY, TIME DELAY, 110 VOLT "AUTO START SWITCH"
15	086-6678	4	HINGE, CONTROL BOX SHELF
16	086-6676	1	LATCH, CONTROL BOX SHELF SAFETY
17	098-2201	18	NUT, LOCK, 8-32 HEX WITH NYLON INSERT
18	098-2404	1	WASHER, ¼" SS FLAT
19	098-1204	25	SCREW, 8-32 X 1/2" RH SLOTTED SS
20	087-6430	1	CONTROL BOX END PANEL, RIGHT SIDE
21	086-6677	2	CONTROL BOX SHELF SUPPORT BRACKET
22	091-7006	1	LIGHT, INDICATOR
23	091-3001	1	SWITCH, BLACK FILL
24	091-3002	1	SWITCH, RED START
25	064-0010	3	CHEMICAL PUMP ASSEMBLY
26	089-9458	1	DECAL SET
27	087-6700	REP	TUBE, SQUEEZE, NORPRENE
28	098-1606	REP	CLAMP, TUBE, (CHEM. PUMP SQUEEZE TUBES)
29	093-1046	21'	TUBING, CHEMICAL LINE, ¼" RED VINYL
30	093-1045	21'	TUBING, CHEMICAL LINE, ¼" GREEN VINYL
31	093-1044	21'	TUBING, CHEMICAL LINE, 1/4" BLUE VINYL
32	091-3009	3	SWITCH, PRIME, MOMENTARY

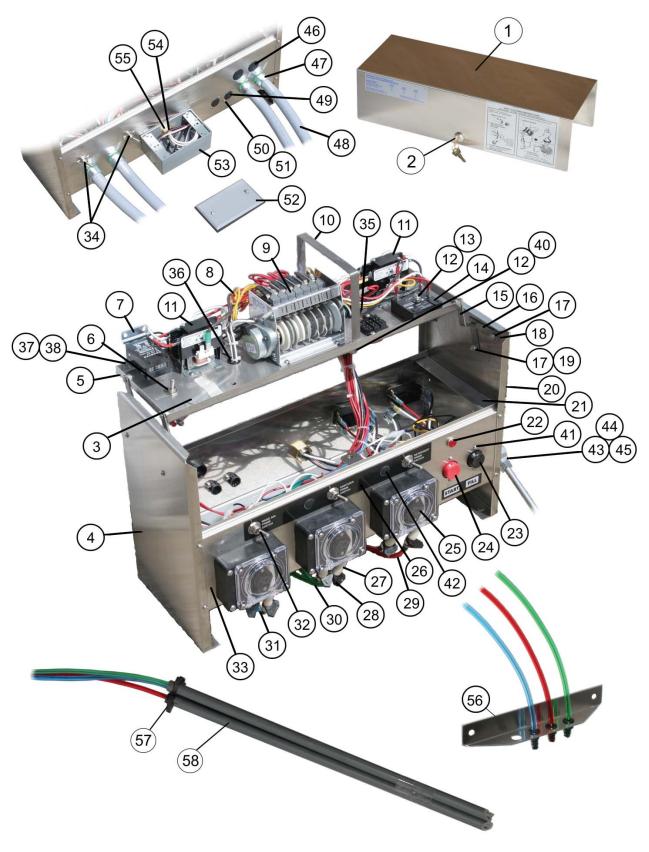

Ref.		No.	
No.	Part No.	Req.	Description
33	087-6429	1	CONTROL BOX BOTTOM
34	091-3008	2	SWITCH, MASTER
35	091-4017	1	GROMMET, 1 5/16" ID
36	091-4002	1	GROMMET, ½" ID
37	098-1104	2	SCREW, 6-32 X 1⁄2" RH SS
38	098-2101	2	NUT, 6-32 HEX SS
39	098-2202	7	NUT, 8-32 HEX SS
40	098-1423	4	BOLT, ¼-20 X ½" HH SS
41	098-1102	4	SCREW, 6-32 X ¼" RH SLOTTED SS
42	098-9022	3	PLUG, 3/8" PLASTIC, (FITS 1/2" HOLE)
43	092-1030	1	FITTING, PLUMBING, 3/8" COMP. X 1/2" FPT 90 ELBOW
44	091-4144	1	CONDUIT NUT, LOCK
45	092-1029	1	FITTING, PLUMBING, 1/2" X 3/8" REDUCER SS
46	098-9020	2	Plug, 7/8" PLASTIC
47	091-4141	5	CONDUIT FITTING, 1/2" STRAIGHT
NS	091-4142	3	CONDUIT FITTING, 1/2" 90 DEGREE ELBOW
48	091-5156	12.5'	CONDUIT, 1/2" (SOLD BY THE FOOT)
49	091-4019	2	GROMMET, SWITCH HOLE (CHEMICAL ALARM)
50	098-1107	4	SCREW, 4-40 X ¼" RH SLOTTED SS
51	098-2001	4	NUT, LOCK, 4-40 SS
52	091-4004	1	COVER, JUNCTION BOX
53	091-4016	1	BOX, JUNCTION
54	292-1006	2	NUT, ½" FPT
55	292-3003	1	NIPPLE, 1/2" X CLOSE, SS
56	064-0038	1	CHEMICAL FEEDER ASSEMBLY
57	098-1605	3	CLAMP, HOSE ½"
58	083-6407	3	TUBE STIFFENER (CHEMICAL CONTAINER-5 GALLON PAILS)
NS	089-0001	1	NAMEPLATE
NS	098-9011	6	RIVET, 1/8" POP
NS	099-4502	1	SWITCH, DOOR CUT-OFF
NS	086-6166	1	BRACKET, DOOR CUT-OFF
NS	098-2416	2	WASHER, ¼" FLAT SS


064-0010 Chemical Pump Assembly 5AG ES



064-0010 Chemical Pump Assembly 5AG ES

Ref. No.	Part No.	No. Req.	Description
1	098-1305	2	SCREW, 10-32 X 1 1/2" RH SLOTTED SS
2	067-6702	1	ROTOR ASSEMBLY, CHEMICAL PUMP, (EXTERNAL)
3	098-1606	2	CLAMP, TUBE, (CHEM. PUMP SQUEEZE TUBES)
4	092-1146	2	FITTING, TUBE, HOSE BARB REDUCER
5	098-1204	3	SCREW, 8-32 X 1/2" RH SLOTTED SS
6	098-1321	1	SCREW, 10-32 X 1 3/4" RH SLOTTED SS
7	083-6707	1	COVER, CHEMICAL PUMP, (EXTERNAL)
8	087-6700	1	TUBE, SQUEEZE, NORPRENE
9	083-6703	1	HOUSING, CHEMICAL PUMP (EXTERNAL)
10	091-1002	1	MOTOR, CHEMICAL PUMP, (50 RPM)
11	091-5223	2	HOUSING, WIRING, MOLEX MALE
12	091-5224	2	PIN, WIRING, MOLEX CONNECTOR MALE
13	091-5221	REP.	HOUSING, WIRING, MOLEX FEMALE
14	091-5222	REP.	PIN, WIRING, MOLEX CONNECTOR FEMALE
REP.	098-1322	N/A	SCREW, 10-32 X 1/4", SET SCREW


064-0038 Chemical Feeder Assembly 5AG ES

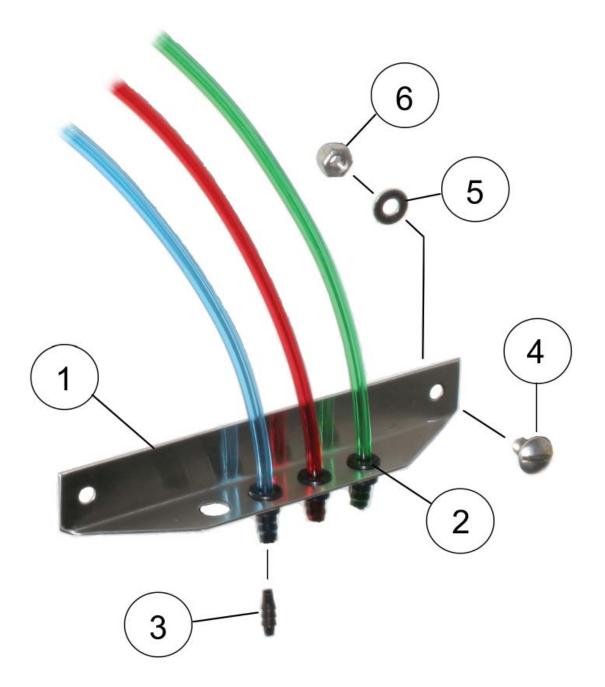

064-0038 Chemical Feeder Assembly 5AG ES

Ref. No.	Part No.	No. Req.	Description
1	086-6419	1	BRACKET, CHEMICAL DISCHARGE
2	091-4015	3	GROMMET, CHEMICAL FEEDER ASSY, ½" OD x ¼" ID
3	093-1043	3	FITTING, TUBE "HOSE BARB"
4	098-1414	2	SCREW, ¼-20 x ½" TRUSS HEAD
5	098-2416	2	WASHER, ¼", SS
6	098-2507	2	LOCKNUT, ¼-20, NYLON INSERT
REP.	093-1044	0	
REP. REP.	093-1044	0	TUBING, CHEMICAL LINE, ¼" BLUE VINYL, (BY THE FOOT) TUBING, CHEMICAL LINE, ¼" GREEN VINYL, (BY THE FOOT)
REP.	093-1045	0	TUBING, CHEMICAL LINE, ¼ "GREEN VINTL, (BT THE FOOT)
	000 1040		


065-2100 Plumbing Assembly 5AG ES

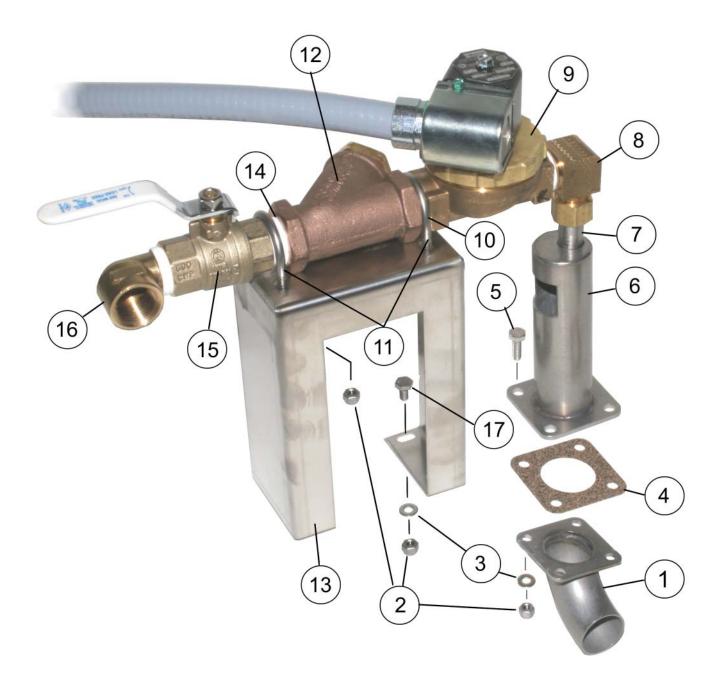

065-2100 Plumbing Assembly 5AG ES

Ref. No.	Part No.	No. Req.	Description
1	385-6124	1	ELBOW, AIR GAP OUTLET FLANGE
2	098-2507	12	NUT, LOCK, 1/4-20 WITH NYLON INSERT
3	098-2416	8	WASHER, 1/4" FLAT SS
4	389-6603	1	GASKET, AIR GAP
5	098-1426	4	BOLT, 1/4-20 X 3/4" HH
6	085-6404	1	AIR GAP
7	092-3119	1	TUBE, FRESH WATER SUPPLY
8	092-1147	1	FITTING, PLUMBING 3/4" MPT x 5/8" COMP. 90 ELBOW
9	089-7001	1	VALVE, WATER SOLENOID, COMPLETE – 3/4"
10	092-1073	1	NIPPLE, 3/4" X CLOSE, SS
11	098-9027	2	BOLT-U, 1/4-20 SS, ¾" U
12	092-9006	1	LINE STRAINER, 3/4" Y TYPE
13	086-6647	1	BRACKET, MOUNTING, FRESH WATER PLUMBING
14	092-1073	1	NIPPLE, 3/4" X CLOSE, SS
15	092-5055	1	VALVE, BALL, 3/4"
16	092-1074	1	FITTING, PLUMBING, STREET "L" 3/4"
17	098-1423	4	BOLT, 1/4-20 X 1/2" HH, SS
REP.	092-5020	0	KIT, WATER SOLENOID VALVE, J/E 3/4"
REP.	092-5026	0	VALVE, WATER SOLENOID, LESS COIL 3/4"
REP.	092-5017	0	COIL, WATER SOLENOID VALVE
REP.	091-4141	0	CONDUIT FITTING, 1/2" STRAIGHT
REP.	091-5156	0	CONDUIT, 1/2" (SOLD BY THE FOOT)
REP.	092-9008	0	SCREEN, LINE STRAINER, 3/4" Y TYPE


American Dish Service

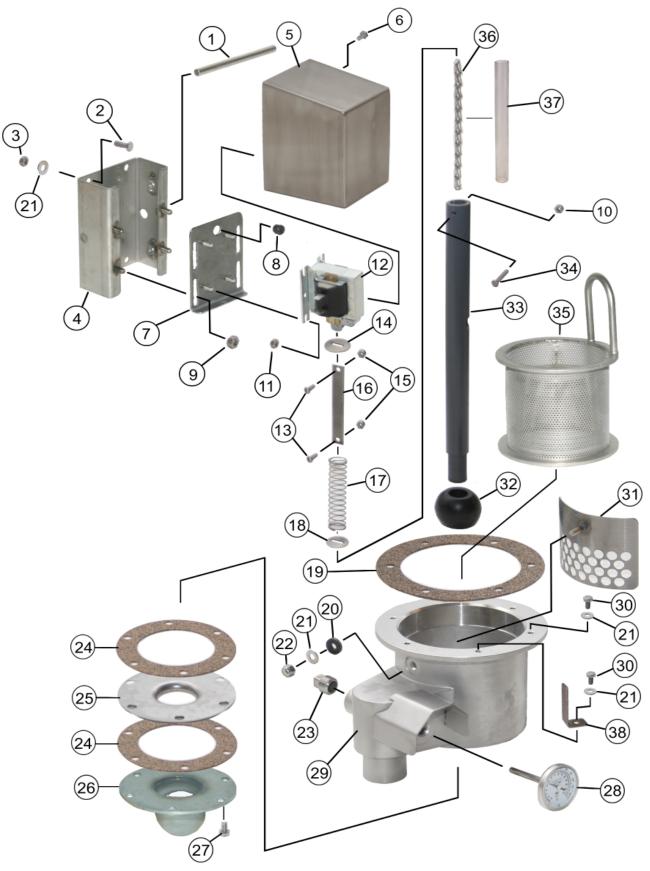

22


Ref. No.	Part No.	No. Req.	Description
1	084-6607	1	TUBE, "DRAIN" CONDUIT
2	098-1423	4	BOLT, ¼-20 x ½", HH, SS
3	098-2507	4	NUT, LOCK, ¼-20 W/NYLON INSERT
4	085-6620	1	BASE, DRAIN SOLENOID
5	085-6623	1	COVER, DRAIN SOLENOID
6	098-1423	2	BOLT, 1/4-20 X 1/2" HH SS
7	085-6622	1	BASE PLATE, DRAIN SOLENOID
8	091-4005	1	GROMMET
9	098-2507	4	NUT, LOCK, ¼-20 W/NYLON INSERT
10	098-2301	1	NUT, LOCK, 10-32
11	098-2301	4	NUT, LOCK, 10-32
12	091-2001	1	SOLENOID, DRAIN, 110 VOLT
13	098-1205	2	SCREW, 8-32 X 1/2" RH SLOTTED SS
14	086-6607	1	WASHER, SLOTTED, LARGE
15	098-2201	2	NUT, LOCK, 8-32 WITH NYLON INSERT SS
16	086-6605	1	LINK, DRAIN SOLENOID
17	098-3001	1	SPRING, DRAIN SOLENOID
18	086-6606	1	WASHER, SLOTTED, SMALL
19	089-6601	1	GASKET, DRAIN CASTING "SUMP"
20	098-9028	1	WASHER, SECONDARY SCREEN - FLAT RUBBER
21	098-2416	7	WASHER, 1/4" FLAT SS
22	098-2507	1	NUT, LOCK, 1/4-20 WITH NYLON INSERT
23	292-1012	1	PLUG, 1/2" MPT SS
24	089-6602	2	GASKET, DRAIN ELBOW
25	086-6601	1	DRAIN SEAT, 1 1/2"
26	085-6435	1	DRAIN ELBOW
27	098-1502	6	BOLT, 5/16-18 X 1/2" HH SS
28	099-1001	1	GAUGE, TEMPERATURE
29	085-6204	1	DRAIN CASTING, WITH TAIL PIECE
30	098-1423	6	BOLT, 1/4-20 X 1/2" HH SS
31	085-6160	1	SCREEN, DRAIN, SECONDARY
32	083-6601	1	DRAIN BALL, 1 1/2"

American Dish Service

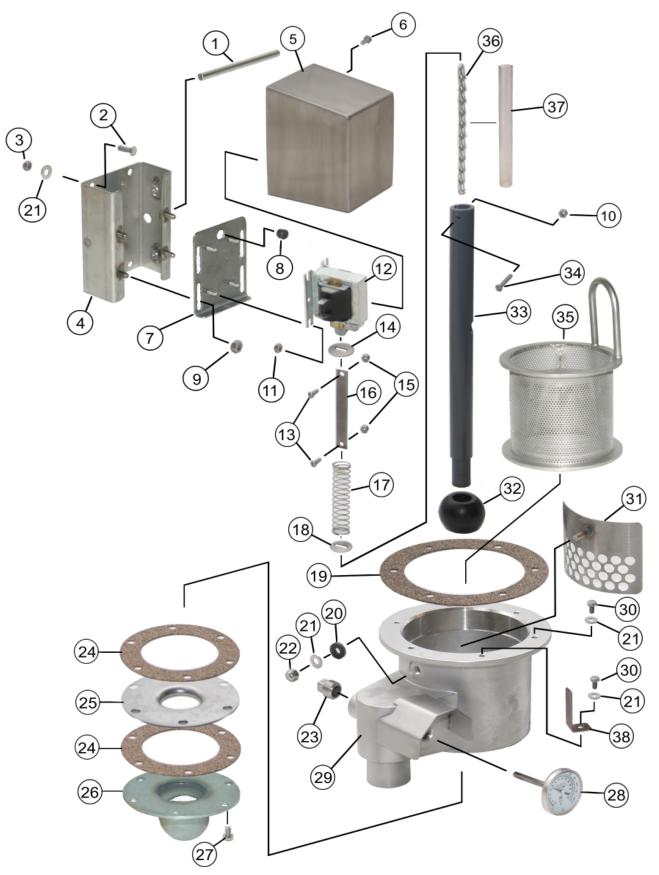


24

Ref. No.	Part No.	No.	
NO.	Fait NO.	Req.	
33	084-6623	1	DRAIN, TUBE
34	098-1311	1	SCREW, 10-38 X 1 3/8" RH SS
35	085-6636	1	SCREEN, DRAIN
36	089-6618	1	CHAIN, DRAIN, PRE-CUT
37	084-6625	1	COVER, CHAIN-VINYL
38	086-6615	2	BRACKET, WATER FIN
REP.	081-6604	0	DRAIN TUBE ASSEMBLY, BALL & TUBE 1 1/2"
	001 0004		

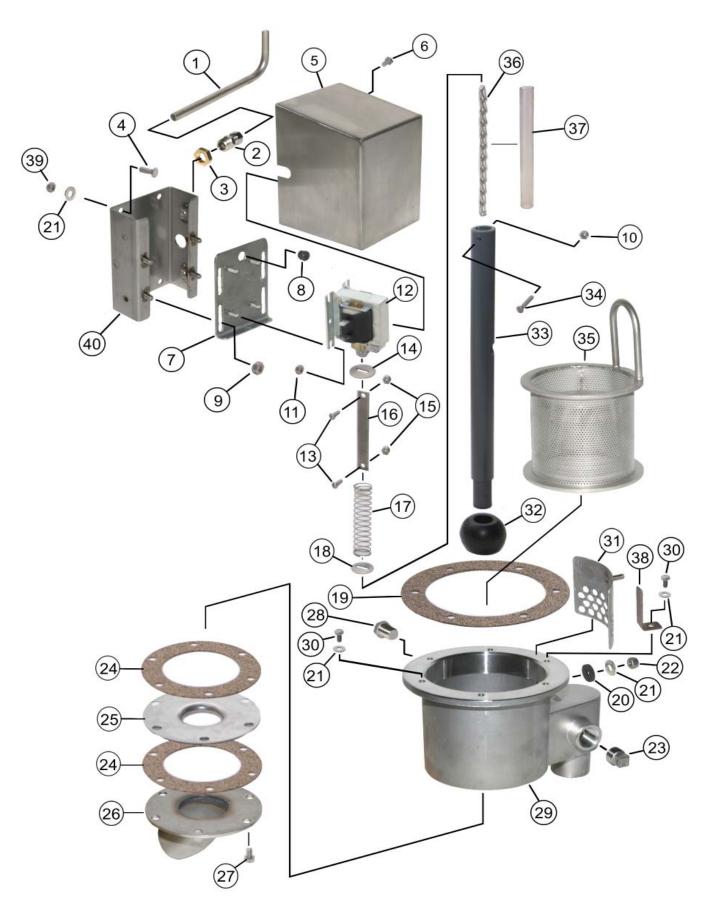


Ref. No.	Part No.	No. Req.	Description
1	086-6740	1	TUBE, "DRAIN" CONDUIT
2	092-1091	1	FITTING, 3/8" COMP. X 3/8" MPT
3	092-1124	1	NUT, LOCK, 3/8" MPT
4	098-1423	4	BOLT ¼-20 x ½", HH, SS
5	085-6617	1	COVER, DRAIN SOLENOID, RH, 5AG ES
6	098-1423	2	BOLT, 1/4-20 X 1/2" HH SS
7	086-6622	1	BASE PLATE, DRAIN SOLENOID
8	091-4005	1	GROMMET
9	098-2507	4	NUT, LOCK, ¼-20 W/ NYLON INSERT, SS
10	098-2301	1	NUT, LOCK, 10-32 SS
11	098-2301	4	NUT, LOCK, 10-32 SS
12	091-2001	1	SOLENOID, DRAIN, 110 VOLT
13	098-1205	2	SCREW, 8-32 X 1/2" RH SLOTTED SS
14	086-6607	1	WASHER, SLOTTED, LARGE
15	098-2201	2	NUT, LOCK, 8-32 WITH NYLON INSERT SS
16	086-6605	1	LINK, DRAIN SOLENOID
17	098-3001	1	SPRING, DRAIN SOLENOID
18	086-6606	1	WASHER, SLOTTED, SMALL
19	089-6601	1	GASKET, DRAIN CASTING "SUMP"
20	098-9028	1	WASHER, SECONDARY SCREEN - FLAT RUBBER
21	098-2416	7	WASHER, 1/4" FLAT SS
22	098-2507	1	NUT, LOCK, 1/4-20 WITH NYLON INSERT
23	292-1012	1	PLUG, 1/2" MPT SS
24	089-6602	2	GASKET, DRAIN ELBOW
25	086-6601	1	DRAIN SEAT, 1 1/2"
26	085-6435	1	DRAIN ELBOW
27	098-1502	6	BOLT, 5/16-18 x ½", HH, SS
28	092-1158	1	PLUG, ¼" HEX, MPT, SS
29	085-6204	1	DRAIN CASTING, WITH TAIL PIECE
30	098-1423	6	BOLT, 1/4-20 X 1/2" HH SS
31	085-6160	1	SCREEN, DRAIN, SECONDARY
32	083-6601	1	DRAIN BALL, 1 1/2"

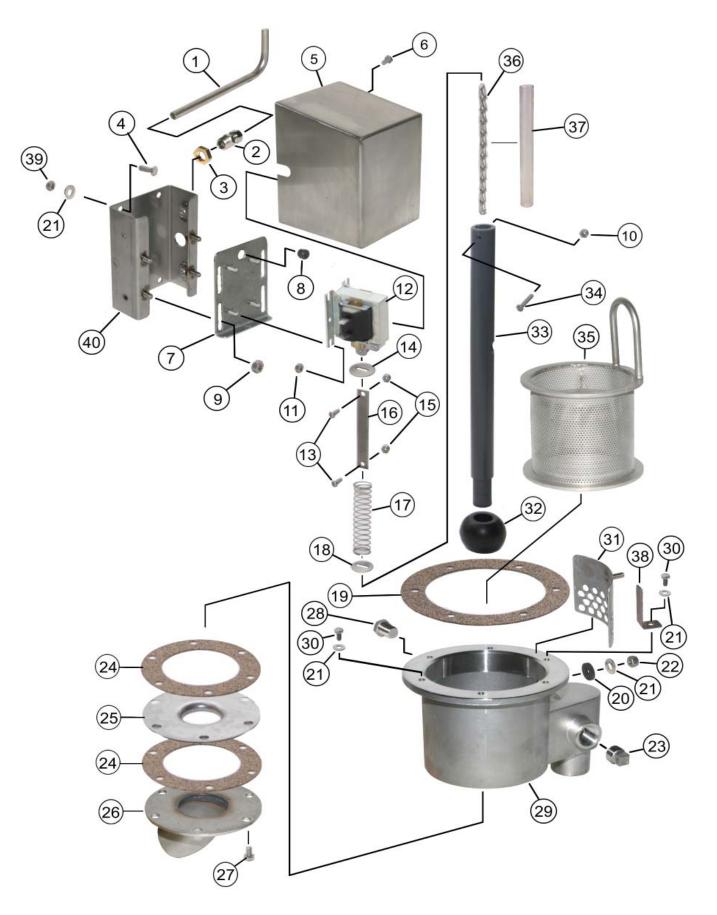

Ref. No.	Part No.	No. Req.	
33	084-6623	1	DRAIN, TUBE
34	098-1311	1	SCREW, 10-38 X 1 3/8" RH SS
35	085-6636	1	SCREEN, DRAIN
36	089-6618	1	CHAIN, DRAIN, PRE-CUT
37	084-6625	1	COVER, CHAIN-VINYL
38	086-6615	2	BRACKET, WATER FIN
39	098-2507	4	NUT, LOCK, ¼-20 W/NYLON INSERT
40	085-6621	1	SOLENOID MOUNTING BASE, 5AG ES RH
REP.	081-6604	0	DRAIN TUBE ASSEMBLY, BALL & TUBE 1 1/2"


067-1800 Door Actuator Assembly 5AG ES

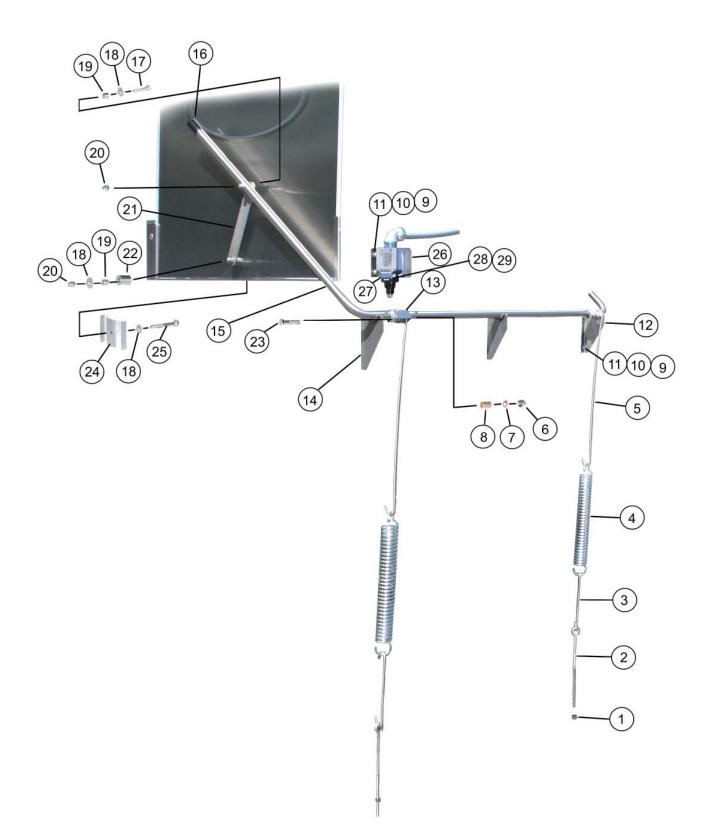

067-1800 Door Actuator Assembly 5AG ES

Ref. No.	Part No.	No.	Description
NO.	Fait NO.	Req.	Description
1	098-2502	2	NUT, 5/16-18 HEX SS
2	098-1581	2	BOLT, EYE, 5/16-18 X 8 5/8" SS
3	086-6738	2	SPRING EXTENSION, SECONDARY, SS, (APPROX. 7")
4	098-3003	2	SPRING, DOOR
5	085-6701	2	SPRING EXTENSION,
6	098-2505	2	NUT, CAP, 5/16-18 SS
7	098-2503	2	WASHER, 5/16 COPPER
8	098-4002	2	BUSHING, BRONZE
9	098-1423	8	BOLT, 1/4-20 X 1/2" HH SS
10	098-2416	8	WASHER, 1/4" FLAT SS
11	098-2507	8	NUT, LOCK, 1/4-20, SS, WITH NYLON INSERT
12	085-6707	1	BRACKET, LEVER ARM SUPPORT, 7/8" RH
13	086-6623	1	BRACKET, DOOR CUT- OFF "L" SHAPED
14	085-6703	2	BRACKET, LEVER ARM SUPPORT, 7/8" LH
15	085-6706	1	LEVER ARM, 5AG ES
16	099-1018	2	CAP, 3/4" LEVER ARM
17	098-1431	2	BOLT, 1/4-20 X 1 3/8" HH SS
18	098-2404	6	WASHER, 1/4" SS FLAT (LARGE)
19	084-6703	4	BUSHING, (DOWEL), 3/8" LONG
20	098-2405	4	NUT, CAP, 1/4-20 SS
21	086-6702	2	DOOR LINK, STANDARD
22	084-6702	2	SPACER, DOOR
23	098-1514	2	BOLT, 5/16-18 X 1 1/2" HH SS
24	086-6701	2	DOOR STOP
25	098-1432	2	BOLT, 1/4-20 X 1 3/4" HH SS
26	086-6166	1	DOOR INTERLOCK SWITCH BRACKET
27	099-4502	1	DOOR INTERLOCK SWITCH, COMPLETE
28	098-2921	2	BOLT, 10-32 x 5/8" SS, HH
29	098-2301	2	NUT-LOCK, 10-32
N/S	099-4500	REP.	SWITCH, DOOR CUT-OFF, BODY ONLY
N/S	099-4501	REP.	SWITCH, DOOR CUT-OFF, PLUNGER HEAD W/ROLLER
N/S	099-4503	REP.	SWITCH, DOOR CUT-OFF, INTERNAL CONTACTOR ONLY

089-9458 Decal Set 5AG ES

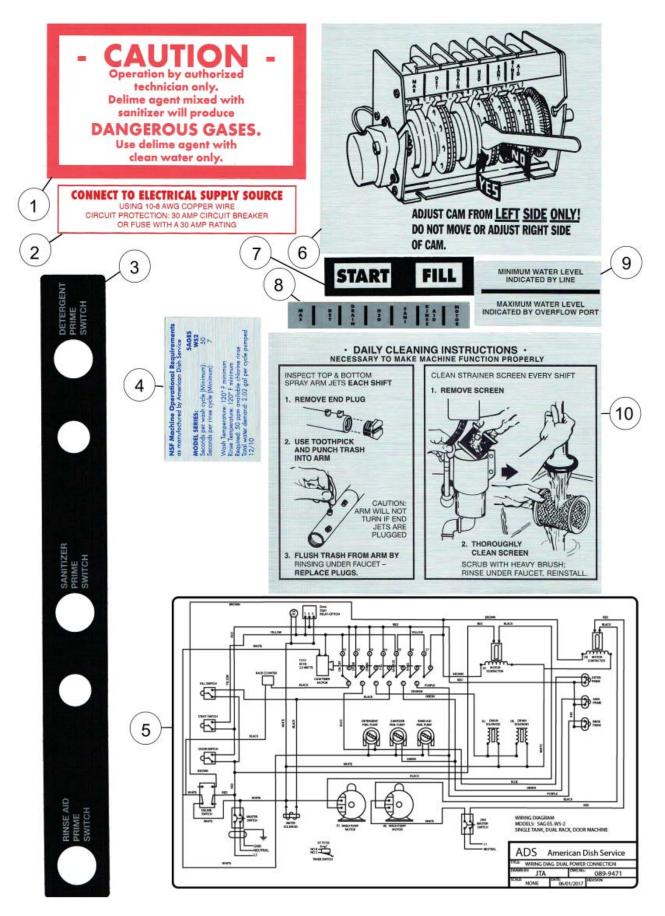

089-9458 Decal SET 5AG ES

Part No	No. Reg	Description
Tart No.	ived.	Description
089-9257	1	DECAL, DELIMING
089-9228	1	DECAL, CONNECT TO POWER SOURCE, 5AG ES
089-9321	1	DECAL, PRIME SWITCHES
089-9322	1	DECAL, NSF
089-9471	1	DECAL,WIRING DIAGRAM
089-9227	1	DECAL, TIMER CAM ADJUSTMENT
089-9237	1	DECAL, START – FILL
089-9465	1	DECAL, TIMER CAM
089-9308	1	DECAL, WATER LEVEL
089-9204	1	DECAL, CLEANING INSTRUCTIONS
	089-9228 089-9321 089-9322 089-9471 089-9227 089-9237 089-9237 089-9465 089-9308	Part No.Req.089-92571089-92281089-93211089-93221089-94711089-92271089-92371089-94651089-93081

American Dish Service

Manufacturer of low and high temperature Commercial Dishwashers and Glasswashers

> 900 Blake Street Edwardsville, Kansas 66111 Ph:(913) 422-3700 Fax:(913) 422-6630